

BEFORE INSTALLATION OR DISCONNECT POWER RISK OF ELECTRICAL SHOCK.



TO BE INSTALLED BY A QUALIFIED ELECTRICIAN IN NATIONAL ELECTRIC CODES. **ACCORDANCE TO LOCAL &** 




4

0





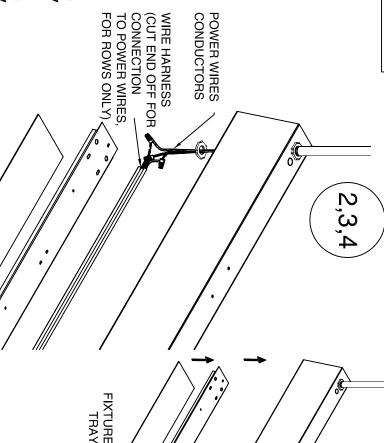

1. REMOVE BOTH THE LENS AND FIXTURE LED TRAY

FIXTURE

TRAY

TRAY

LENS

LENS

- MOUNTING LOCATIONS ACCORDING TO 2. INSTALL STEM AND TIGHTEN LOCKNUTS INSTRUCTIONS SUPPLIED WITH MOUNTING KIT. SECURELY. HANG FIXTURE. INSTALL STEMS IN
- DRAWINGS FOR JOB SPECIFIC WIRING 3. CONNECT SUPPLY WIRES TO FIXTURE WIRES. USE APPROPRIATE STRAIN RELIEF AS REQUIRED BY LOCAL ELECTRICAL CODES. REFER TO JOB

DRAWINGS FOR JOB SPECIFIC WIRING STANDARD WIRING DIAGRAM SHOWN, REFER TO JOB CONDUCTORS TO APPROPRIATE WIRES OF WIRE HARNESS FIXTURE. CUT END FROM HARNESS AND CONNECT POWER FEED WIRES). FEED POWER WIRES THROUGH STEM IN FIXTURE (END LEFT FIXTURE IS PREFERRED TO START 4. DETERMINE LOCATION OF POWER WIRES COMING INTO

**NOTE: POWER WIRES ARE TYPICALLY** 

INSTALLED IN END LEFT FIXTURES

CONNECTIONS ARE MADE, INSTALLATION IS COMPLETE 4.REINSTALL LED TRAY AND LENS AFTER ALL WIRING

CONTACT INFORMATION: WWW: http://www.dayolite.com E-mail: sales@dayolite.com 126 Chestnut Street, Warwick, RI 02888 Tel. (401) 467-8232 Fax. (401) 941-2960 

ATHL2-PD----MODEL NO.

SHEET 1 OF 1

1/12/23

ART NUMBER: 970153A0

Lighting Without Limits 

PROPERTY OF DAY-O-LITE AND THE INFORMATION IT CONTAINS MAY NOT BE USED WITHOUT WRITTEN CONSENT OF DAY-O-LITE. MECHANICAL OR MATERIAL CHANGES TO THE FIXTURES WHICH DO NOT AFFECT THE APPEARANCE OR PERFORMANCE. THIS PRINT IS THE RESPONSIBLE FOR INADEQUATE REINFORCEMENT OF STRUCTURAL SUPPORT SYSTEMS. DAY-O-LITE RESERVES THE RIGHT TO MAKE ANY REQUIRES THAT ANY FIXTURE IN EXCESS OF 50 POUNDS MUST BE INDEPENDENTLY SUPPORTED OF THE OUTLET BOX. DAY-O-LITE IS NOT SIMILAIR INSTALLATION. BE SURE TO UNDERSTAND ALL PROCEDURES PRIOR TO INSTALLATION. IMPORTANT: THE NATIONAL ELECTRIC CODE SPECIFIC, CONSULT SHOP DRAWINGS BEFORE CONSTRUCTING ROWS. STANDARD OPTIONS/SIZES SHOWN, OTHER OPTIONS AVAILABLE WITH <u>MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN. DISCONNECT POWER DURING INSTALLATION/SERVICING.</u> ROW CONFIGURATION IS JOB