RECESSED GRID FIXTURE INSTALLATION

PAGE 1 OF 2

INSTRUCTIONS APPLY TO THE FOLLOWING DAY-O-LITE TROFFER MODELS

ELITE 2 (ELTL-2) SERIES ; HARMONY (HML) SERIES ; HARMONY II (HML2) SERIES ; MEDL-EA


SERIES; MEDL-MF SERIES; NEW AGE (NASL-PA, NASL-PIW) SERIES

BEFORE INSTALLATION OR SERVICING. **DISCONNECT POWER** RISK OF ELECTRICAL SHOCK.







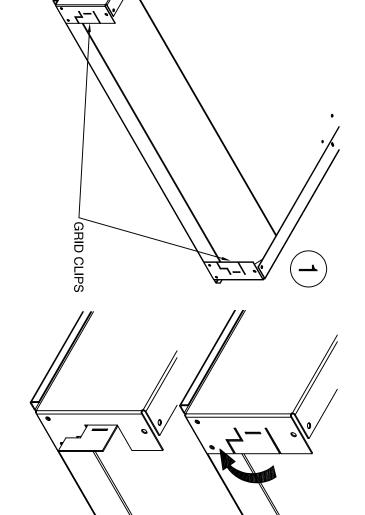

AWAY FROM HOUSING 1. BEND THE FOUR GRID CLIPS 90 DEGREES

2. DROP FIXTURE INTO APPROPRIATE SIZED

3. INSTALL TIE WIRE TO FIXTURE AND SECURE OTHER END TO APPROPRIATE STRUCTURE TO SUPPORT WEIGHT OF FIXTURE.

CONNECTOR PER LOCAL ELECTRICAL CODES. STANDARD KNOCKOUT BRING FEED WIRES INTO FIXTURE. CONNECT SUPPLY WIRES AND FIXTURE WIRES USING APPROPRIATE 4. REMOVE ACCESS PLATE AND/OR ELECTRICAL WIRING DIAGRAM SHOWN, REFER TO JOB DRAWINGS FOR JOB

5.REINSTALL ACCESS PLATE AFTER ALL WIRING CONNECTIONS ARE MADE, INSTALLATION IS COMPLETE

SPECIFIC, CONSULT SHOP DRAWINGS BEFORE CONSTRUCTING ROWS. STANDARD OPTIONS/SIZES SHOWN, OTHER OPTIONS AVAILABLE WITH SIMILAIR INSTALLATION. BE SURE TO UNDERSTAND ALL PROCEDURES PRIOR TO INSTALLATION. IMPORTANT: THE NATIONAL ELECTRIC CODE REQUIRES THAT ANY FIXTURE IN EXCESS OF 50 POUNDS MUST BE INDEPENDENTLY SUPPORTED OF THE OUTLET BOX. DAY-O-LITE IS NOT RESPONSIBLE FOR INADEQUATE REINFORCEMENT OF STRUCTURAL SUPPORT SYSTEMS. DAY-O-LITE RESERVES THE RIGHT TO MAKE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN. DISCONNECT POWER DURING INSTALLATION/SERVICING. ROW CONFIGURATION IS JOB ANY MECHANICAL OR MATERIAL CHANGES TO THE FIXTURES WHICH DO NOT AFFECT THE APPEARANCE OR PERFORMANCE. THIS PRINT IS VARIOUS----

(BY OTHERS) TIE WIRES 970001A0 ART NUMBER:

CONTACT INFORMATION: E-mail: sales@dayolite.com WWW: http://www.dayolite.com Tel. (401) 467-8232 | Fax. (401) 941-2960 126 Chestnut Street, Warwick, RI 02888

SHEET 1 OF 2

10/7/19 SSUED ON

RECESSED GRID FIXTURE INSTALLATION

INSTRUCTIONS APPLY TO THE FOLLOWING DAY-O-LITE TROFFER MODELS:

ELITE 2 (ELTL-2) SERIES ; HARMONY (HML) SERIES ; HARMONY II (HML2) SERIES ; MEDL-EA

SERIES; MEDL-MF SERIES; NEW AGE (NASL-PA, NASL-PIW) SERIES







POWER. CONNECTIONS UNDER SPLICE, OR TAP ANY WIRED DO NOT CONNECT, MODIFY,

CONNECTOR PER LOCAL ELECTRICAL CODES. STANDARD KNOCKOUT BRING FEED WIRES INTO FIXTURE. CONNECT 4. REMOVE ACCESS PLATE AND/OR ELECTRICAL SPECIFIC WIRING WIRING DIAGRAM SHOWN, REFER TO JOB DRAWINGS FOR JOB SUPPLY WIRES AND FIXTURE WIRES USING APPROPRIATE


5.REINSTALL ACCESS PLATE AFTER ALL WIRING CONNECTIONS ARE MADE, INSTALLATION IS COMPLETE

SUPPORT WEIGHT OF FIXTURE.

OTHER END TO APPROPRIATE STRUCTURE TO 3. INSTALL TIE WIRE TO FIXTURE AND SECURE 2. DROP FIXTURE INTO APPROPRIATE SIZED GRID OPENING FROM ABOVE GRID.

1. BEND THE FOUR GRID CLIPS 90 DEGREES

AWAY FROM HOUSING

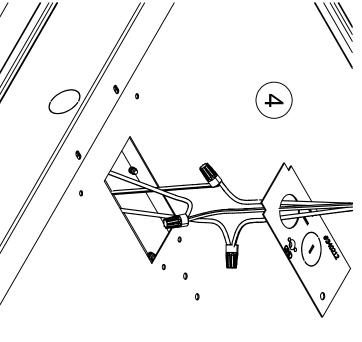

SINGLE CIRCUIT FIXTURE ACCESS PLATE OR POWER CABLE MAINS POWER BLACK = HOT (SWITCHED) VIOLET = DIM+ WHITE = NEUTRAL GREEN = GROUND GREY = DIM-HED DRIVER

CODE REQUIRES THAT ANY FIXTURE IN EXCESS OF 50 POUNDS MUST BE INDEPENDENTLY SUPPORTED OF THE OUTLET BOX. DAY-O-LITE IS NOT RESPONSIBLE FOR INADEQUATE REINFORCEMENT OF STRUCTURAL SUPPORT SYSTEMS. DAY-O-LITE RESERVES THE RIGHT TO MAKE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN. DISCONNECT POWER DURING INSTALLATION/SERVICING. ROW CONFIGURATION IS JOB SPECIFIC, CONSULT SHOP DRAWINGS BEFORE CONSTRUCTING ROWS. STANDARD OPTIONS/SIZES SHOWN, OTHER OPTIONS AVAILABLE WITH SIMILAIR INSTALLATION. BE SURE TO UNDERSTAND ALL PROCEDURES PRIOR TO INSTALLATION. IMPORTANT: THE NATIONAL ELECTRIC THE PROPERTY OF DAY-O-LITE AND THE INFORMATION IT CONTAINS MAY NOT BE USED WITHOUT WRITTEN CONSENT OF DAY-O-LITE. ANY MECHANICAL OR MATERIAL CHANGES TO THE FIXTURES WHICH DO NOT AFFECT THE APPEARANCE OR PERFORMANCE. THIS PRINT IS

> CONTACT INFORMATION: MODEL NO. VARIOUS----

> > SHEET 2 OF 2

10/7/19

PART NUMBER: 970001A0

E-mail: sales@dayolite.com WWW: http://www.dayolite.com Tel. (401) 467-8232 | Fax. (401) 941-2960 126 Chestnut Street, Warwick, RI 02888

Lighting Without Limits