STEM INSTALLED-

ADL-RO6 DIRECT PD INSTRUCTIONS



DISCONNECT POWER
BEFORE INSTALLATION OR RISK OF ELECTRICAL SHOCK.

CEILING TO BE PROPERLY REINFORCED TO SUPPORT

WEIGHT OF THE FIXTURE.




QUALIFIED ELECTRICIAN IN ACCORDANCE TO LOCAL & REFERENCE SHOP NATIONAL ELECTRIC CODES.








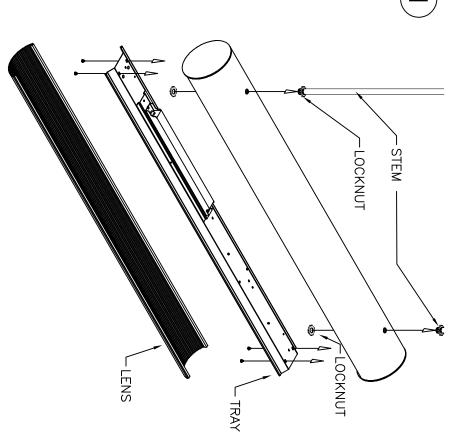

- JOB SPECIFIC WIRING POWER, TYPICAL WIRING DIAGRAM SHOWN. REFER TO JOB DRAWINGS FOR CONNECT AC CABLES TO STRUCTURAL CEILING. CONNECT FEED TO MAINS 1. REMOVE LENS AND TRAY. INSTALL STEM INTO HOUSING. HANG FIXTURE.
- 2. REINSTALL LOWER TRAY
- 3. REINSTALL LENS

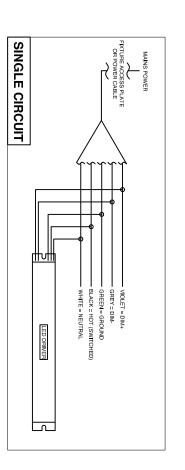

THE PROPERTY OF DAY-O-LITE AND THE INFORMATION IT CONTAINS MAY NOT BE USED WITHOUT WRITTEN CONSENT OF DAY-O-LITE.
ANY MECHANICAL OR MATERIAL CHANGES TO THE FIXTURES WHICH DO NOT AFFECT THE APPEARANCE OR PERFORMANCE. THIS PRINT IS
NOT RESPONSIBLE FOR INADEQUATE REINFORCEMENT OF STRUCTURAL SUPPORT SYSTEMS. DAY-O-LITE RESERVES THE RIGHT TO MAKE
CODE REQUIRES THAT ANY FIXTURE IN EXCESS OF 50 POUNDS MUST BE INDEPENDENTLY SUPPORTED OF THE OUTLET BOX. DAY-O-LITE IS
WITH SIMILAIR INSTALLATION. BE SURE TO UNDERSTAND ALL PROCEDURES PRIOR TO INSTALLATION. IMPORTANT: THE NATIONAL ELECTRIC
SPECIFIC, CONSULT SHOP DRAWINGS BEFORE CONSTRUCTING ROWS. STANDARD OPTIONS/SIZES SHOWN, OTHER OPTIONS AVAILABLE
MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN. DISCONNECT POWER DURING INSTALLATION/SERVICING. ROW CONFIGURATION IS JOB

	,	WWW http://www.dayolite.com
Lighting Without Limits	Lighting W.	E-mail: sales@dayolite.com
		Tel. (401) 467-8232 Fax. (401) 941-2960 Tax
		126 Chestnut Street, Warwick, RI 02888
		CONTACT INFORMATION:
2/28/2020	SHEET 1 OF 2 2/28/2020	ADL-RO6

ADL-RO6---MODEL NO.:

ng Without Limits

PART NUMBER: 970102A0 SSUED ON:

ADL-RO6 DIRECT PD INSTRUCTIONS



RISK OF ELECTRICAL SHOCK.
DISCONNECT POWER
BEFORE INSTALLATION OR

WEIGHT OF THE FIXTURE. CEILING TO BE PROPERLY REINFORCED TO SUPPORT





NATIONAL ELECTRIC CODES. QUALIFIED ELECTRICIAN IN ACCORDANCE TO LOCAL &



DO NOT CONSTRUCT ROW ON FLOOR & LIFT TO CEILING.

REFERENCE SHOP
DRAWINGS FOR CRITICAL
MOUNTING DIMENSIONS.

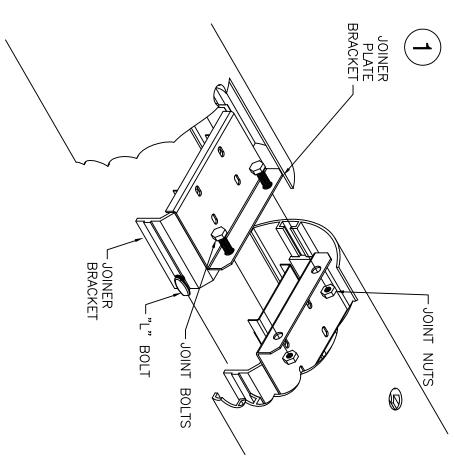

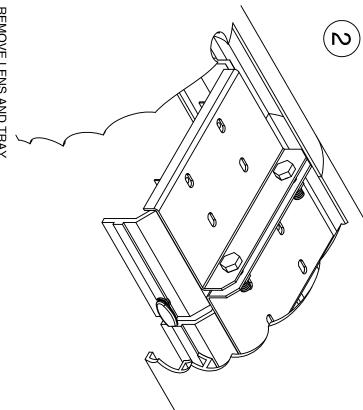

- 1 REMOVE LENS AND TRAY
- JOINING HARDWARE FIXTURE, INSTALL JOINER PLATE BRACKETS AND FASTEN AND SECURE ALL 2. LOOSEN "L" BOLTS AT JOINT BRACKET, SLIDE JOINT BRACKET INTO NEXT
- 3. REINSTALL LOWER TRAY
- 4. REINSTALL LENS

THE PROPERTY OF DAY-O-LITE AND THE INFORMATION IT CONTAINS MAY NOT BE USED WITHOUT WRITTEN CONSENT OF DAY-O-LITE.
ANY MECHANICAL OR MATERIAL CHANGES TO THE FIXTURES WHICH DO NOT AFFECT THE APPEARANCE OR PERFORMANCE. THIS PRINT IS
NOT RESPONSIBLE FOR INADEQUATE REINFORCEMENT OF STRUCTURAL SUPPORT SYSTEMS. DAY-O-LITE RESERVES THE RIGHT TO MAKE
CODE REQUIRES THAT ANY FIXTURE IN EXCESS OF 50 POUNDS MUST BE INDEPENDENTLY SUPPORTED OF THE OUTLET BOX. DAY-O-LITE IS
WITH SIMILAIR INSTALLATION. BE SURE TO UNDERSTAND ALL PROCEDURES PRIOR TO INSTALLATION. IMPORTANT: THE NATIONAL ELECTRIC
SPECIFIC, CONSULT SHOP DRAWINGS BEFORE CONSTRUCTING ROWS. STANDARD OPTIONS/SIZES SHOWN, OTHER OPTIONS AVAILABLE
MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN. DISCONNECT POWER DURING INSTALLATION/SERVICING. ROW CONFIGURATION IS JOB

E-mail: sales@dayolite.com WWW: http://www.dayolite.com 126 Chestnut Street, Warwick, RI 02888 Tel. (401) 467-8232 Fax. (401) 941-2960

SHEET 1 OF 2

PART NUMBER: **970102A0**

2/28/2020 ISSUED ON:

Lighting Without Limits