
WEIGHT OF THE FIXTURE. REINFORCED TO SUPPORT CEILING TO BE PROPERLY


MOUNTING DIMENSIONS DRAWINGS FOR CRITICAL REFERENCE SHOP



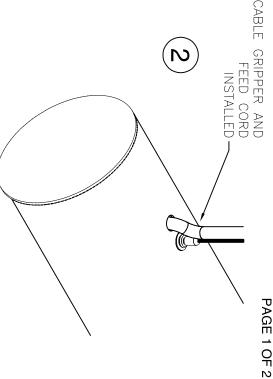






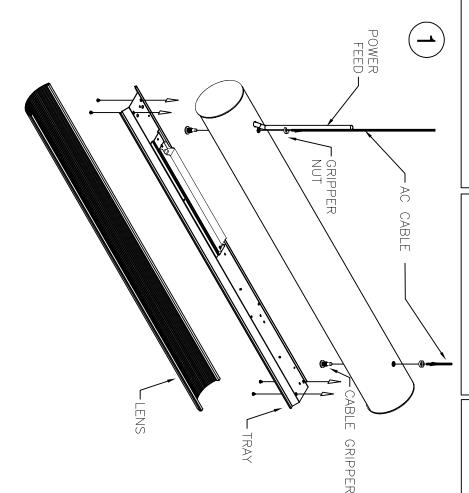

- REFER TO JOB DRAWINGS FOR JOB SPECIFIC WIRING HOUSING. HANG FIXTURE. CONNECT AC CABLES TO STRUTURAL CEILING. REMOVE LENS AND TRAY INSTALL FEED CORD AND CABLE GRIPPER INTO CONNECT POWER FEED TO MAINS POWER, TYPICAL WIRING DIAGRAM SHOWN
- SAFETY CAP FIXTURE HEIGHT CAN BE ADJUSTED USING THE CABLE GRIPERS. LOOSEN TOP SAFETY CAP OF GRIPPER, ADJUST CABLE LENGTH AND TIGHTEN TOP
- 3. REINSTALL LOWER TRAY
- 4. REINSTALL LENS

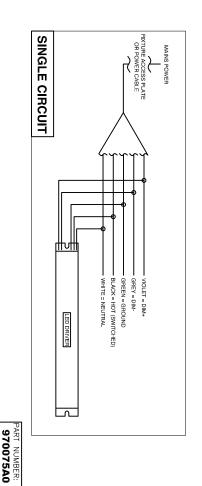

NOT RESPONSIBLE FOR INADEQUATE REINFORCEMENT OF STRUCTURAL SUPPORT SYSTEMS. DAY-O-LITE RESERVES THE RIGHT TO MAKE ANY MECHANICAL OR MATERIAL CHANGES TO THE FIXTURES WHICH DO NOT AFFECT THE APPEARANCE OR PERFORMANCE. THIS PRINT IS CODE REQUIRES THAT ANY FIXTURE IN EXCESS OF 50 POUNDS MUST BE INDEPENDENTLY SUPPORTED OF THE OUTLET BOX. DAY-O-LITE IS MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN. DISCONNECT POWER DURING INSTALLATION/SERVICING. ROW CONFIGURATION IS JOB SPECIFIC, CONSULT SHOP DRAWINGS BEFORE CONSTRUCTING ROWS. STANDARD OPTIONS/SIZES SHOWN, OTHER OPTIONS AVAILABLE WITH SIMILAIR INSTALLATION. BE SURE TO UNDERSTAND ALL PROCEDURES PRIOR TO INSTALLATION. IMPORTANT: THE NATIONAL ELECTRIC THE PROPERTY OF DAY-O-LITE AND THE INFORMATION IT CONTAINS MAY NOT BE USED WITHOUT WRITTEN CONSENT OF DAY-O-LITE.

> CONTACT INFORMATION: MODEL NO. ADL-RO6---

> > SHEET 1 OF 2

2/28/2020

E-mall: sales@dayollte.com WWW: http://www.dayollte.com Tel. (401) 467-8232 | Fax. (401) 941-2960 126 Chestnut Street, Warwick, RI 02888



## ADL-RO6 DIRECT AC INSTRUCTIONS



DISCONNECT POWER
BEFORE INSTALLATION OR RISK OF ELECTRICAL SHOCK

CEILING TO BE PROPERLY REINFORCED TO SUPPORT

WEIGHT OF THE FIXTURE



QUALIFIED ELECTRICIAN IN ACCORDANCE TO LOCAL & NATIONAL ELECTRIC CODES. TO BE INSTALLED BY A




FORMENTIONED WARNINGS COULD VOID PRODUCT INSTRUCTIONS & FAILURE TO COMPLY TO WARRANTY






DRAWINGS FOR CRITICAL MOUNTING DIMENSIONS.

REFERENCE SHOP

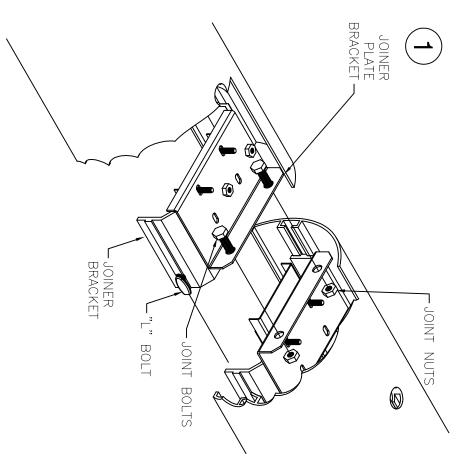

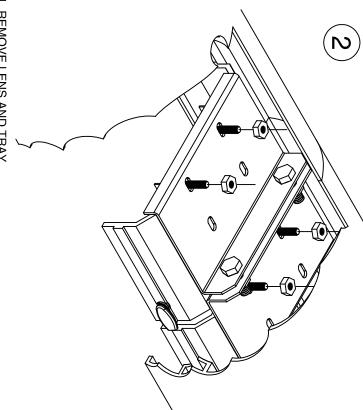

- 1 REMOVE LENS AND TRAY
- JOINING HARDWARE FIXTURE, INSTALL JOINER PLATE BRACKETS AND FASTEN AND SECURE ALL LOOSEN "L" BOLTS AT JOINT BRACKET, SLIDE JOINT BRACKET INTO NEXT
- 3. REINSTALL LOWER TRAY
- 4. REINSTALL LENS

SPECIFIC, CONSULT SHOP DRAWINGS BEFORE CONSTRUCTING ROWS. STANDARD OPTIONS/SIZES SHOWN, OTHER OPTIONS AVAILABLE WITH SIMILAIR INSTALLATION. BE SURE TO UNDERSTAND ALL PROCEDURES PRIOR TO INSTALLATION. IMPORTANT: THE NATIONAL ELECTRIC NOT RESPONSIBLE FOR INADEQUATE REINFORCEMENT OF STRUCTURAL SUPPORT SYSTEMS. DAY-O-LITE RESERVES THE RIGHT TO MAKE CODE REQUIRES THAT ANY FIXTURE IN EXCESS OF 50 POUNDS MUST BE INDEPENDENTLY SUPPORTED OF THE OUTLET BOX. DAY-O-LITE IS MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN. DISCONNECT POWER DURING INSTALLATION/SERVICING. ROW CONFIGURATION IS JOB ANY MECHANICAL OR MATERIAL CHANGES TO THE FIXTURES WHICH DO NOT AFFECT THE APPEARANCE OR PERFORMANCE. THIS PRINT IS

ADL-RO6---

SHEET 1 OF 2

2/28/2020 SSUED ON

ART NUMBER: 970075A0

THE PROPERTY OF DAY-O-LITE AND THE INFORMATION IT CONTAINS MAY NOT BE USED WITHOUT WRITTEN CONSENT OF DAY-O-LITE.

CONTACT INFORMATION: E-mail: sales@dayolite.com WWW: http://www.dayolite.com 126 Chestnut Street, Warwick, RI 02888 Tel. (401) 467-8232 Fax. (401) 941-2960